

Battery Operated Ride-On Vehicle

Assembly Manual & User's Guide

Mercedes-Benz M-Klasse W 166

Item No.: KL-7012



 **WARNING:** Adult Assembly Required

Please read this manual carefully before assembly and use.

This manual contains important information which will help you to assemble the unit includes safety instructions. Please keep this manual for future purpose

Mercedes-Benz M-Klasse W 166 is registered trademark owned and licensed by Mercedes-Benz Accessories GmbH.
Manufactured by Kalee Children's Products Co., Ltd., www.mercedes-benz.com

Vehicle / Battery Specifications:

Age: 3 years and up

Maximum Capacity: 40kgs / 88 lbs

Speed: 2.2-2.8mph

Battery Type: Sealed lead-acid rechargeable, 12Volt 7Ah

Charging time: Always charge the battery for 8-10 hours before first use and when recharging is needed. Never charge for more than 20 hours.

Power input for Charger: A/C 100-240 Volts, 60Hz

Power output to Battery: DC 14Volts, 1000mA



WARNING:

1. Use the toy only on flat surfaces, such as sidewalks, driveways or playgrounds. Never ride the vehicle in dangerous places such as busy streets, roads or highways.
2. Never use/ride/play near swimming pools or other bodies of water.
3. Never ride the vehicle in muddy or sandy areas. Never ride in hilly areas or on steep slopes. This vehicle was made to operate on dry leveled ground.
4. Never ride in the dark or in dimly lit areas.
5. Clean the vehicle only with a damp cloth and never submerge vehicle in water or spray with water directly from a hose.
6. Do not exceed the recommended weight limit of 40 kgs / 88 lbs.
7. To avoid suffocation of children please destroy all plastic bags after assembly of the vehicle.
8. If vehicle is equipped with a forward / reverse switch, never press this switch while vehicle is in motion. Always stop the vehicle before switching directions.
9. This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
10. The charger used for the vehicle are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.
11. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

CHARGING CAUTIONS:

- The charger is not a toy. Do not allow children to play with the charger or to recharge the battery.
- Turn the power switch to "OFF" when charging.
- Before the first use, you should charge the battery for 8-10 hours. Do not charge the battery for more than 20 hours to avoid overheating the charger.
- It is normal for the charger to feel warm during charging. If the charger feels very hot, stop charging, unplug the charger and check the battery and charger.
- Use the charger in a dry location only and store in a dry location when not in use.
- Regularly check the charger, battery and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

BATTERY SAFETY WARNING:

- Only use the battery and charger supplied by the manufacturer.
- Do not connect the battery terminals directly together. This will cause the battery to short-circuit.
- Never short-circuit the battery terminals or modify the electrical system. Alterations may cause a fire resulting in serious injuries.
- Do not mix old and new batteries or batteries of different types.
- Remove batteries during long periods of non-use. Always remove batteries from the product. Dispose of batteries safely. Do not dispose of batteries in fires. The batteries may explode or leak.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- Recharge the battery fully before storage, then charge it every 3 months to extend the life of the battery.



WARNING - Risk of fire. Do not by pass fuse. Replace only with the correct amperage fuse.


Caution:

This ride on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker is a self-resetting safety device which automatically "trips" and shuts down the operation of the vehicle if it is overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 25 seconds and allow the rider to resume normal operation.


Part List:

| No. | | Description | Qty |
|-----|---|-----------------|---------|
| 1 |  | Body | 1 pc |
| 2 |  | Charger | 1 pc |
| 3 |  | Radio line | 1 pc |
| 4 |  | Rearview Mirror | 1 pairs |

How to assemble the vehicle:


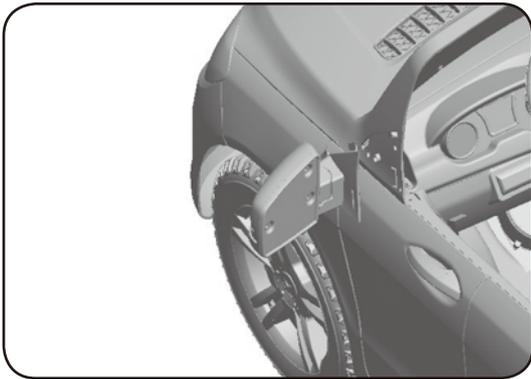


- Attach the Rearview Mirror (#4) onto the windshield of the vehicle.

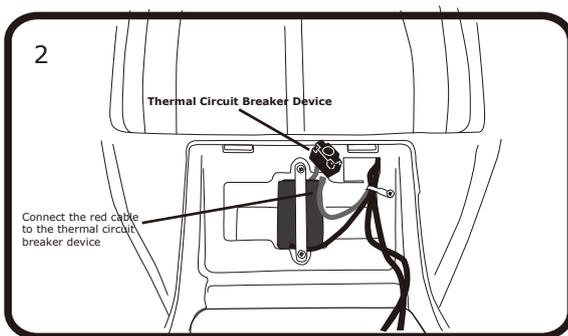

- The vehicle is shipped with the battery unplugged. It must be connected before the first use.
- The battery is located in the seat compartment of the body.
- Unscrew the prefixed screw on the back of the seat with screwdriver(not included).
- Connect the red cable to the Thermal Circuit Breaker device.
- Place the seat and tighten the screw with screwdriver.

Operation of the Vehicle:

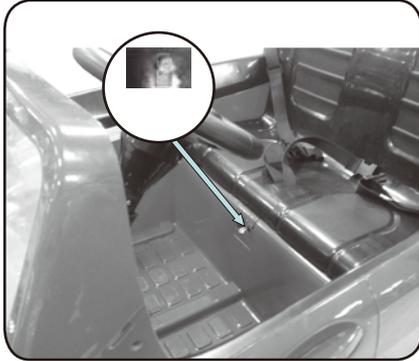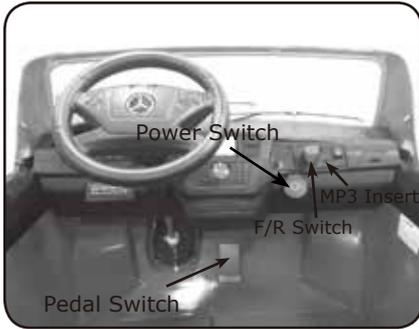

1. Make sure the battery is fully charged and the red plug is connected to the battery plug under the seat.
2. Locate the direction switch to the right of the steering wheel. Push the direction switch to "F" and press the accelerator pedal, vehicle will move forward. Headlights come on while vehicle is moving forward.
3. To stop the vehicle remove foot from accelerator pedal. When stopped pull the direction switch to "B", then press the accelerator pedal, vehicle will move backward. The taillight will come on while moving backward.

*****NOTE: Do not change directions while the vehicle is in motion*****

4. Steering Wheel: Press the buttons in the middle for different driving sounds.
5. MP3 Plug-in: Plug in MP3 to play music. Audio Line (#3) included with the car.

Charging the Battery:



- The socket for charging the battery is located near the seat.
- Connect the charger plug into the DC jack, then plug the charger into a household outlet.
- Charge the battery for 8-10 hours. Never charge more than 20 hours.
- When the battery is fully charged, unplug the charger and store it in a cool and dry place.

Maintaining your vehicle:

- It is a parents responsibility to check main parts of the vehicle before use. Regularly examine the vehicle for potential hazards, such as the battery, charge cable, cord and plug. Ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.
- Occasionally use a lightweight oil to lubricate moving parts such as the wheels and steering linkages.
- Keep the vehicle in an upturned position, do not overturn or incline it. It is recommended to store the vehicle indoors when not in use. If stored outdoors, the vehicle needs to be covered by a tarp for protection against weather elements.
- This toy should be kept away from fire. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt. While charging ensure all flammable liquids are well away from the vehicle.
- *ADULTS ONLY* to recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used.
- Use a soft, dry cloth to clean vehicle.
- *DO NOT* use any chemical liquids to clean the plastic surface of the vehicle.
- *DO NOT* wash the vehicle with soap and water.
- *DO NOT* drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- When not in use all electrical sources should be turned off. Press the power switch to the "OFF" position to turn the power off. Also disconnect the battery connection under the seat.
- Please do not change the structure of this product and circuit system.
- *DO NOT* use the vehicle for other purposes except riding.

Safety Precautions:

1. While riding, adult supervision is required at all times.
2. Always wear a helmet when riding.
3. Do not ride near roads or on the footpath.
4. It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15 degrees.
5. It is recommended to ride this vehicle on smooth surfaces only.
6. Do not use this vehicle outdoors when it is raining.
7. Make sure you come to a complete stop before changing directions from forward to reverse.
8. Don't allow children to operate the charger or play with the battery.
9. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to driver this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connections of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located the bottom of the vehicle.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Do not let any child touch the wheels or be near them when the vehicle is moving.



WARNING:

To reduce the risk of injury, adult supervision is required.
Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes and never allow more than 1 rider.



WARNING:

Choking Hazard! Contains small parts. Not for children under 3 years old!



WARNING:

Contains small parts, sharp points and sharp edges. Adult assembly required.



WARNING:


Not to be used in traffic.



WARNING:

This toy is unsuitable for children under 3 years due to its maximum speed.

BOM List:

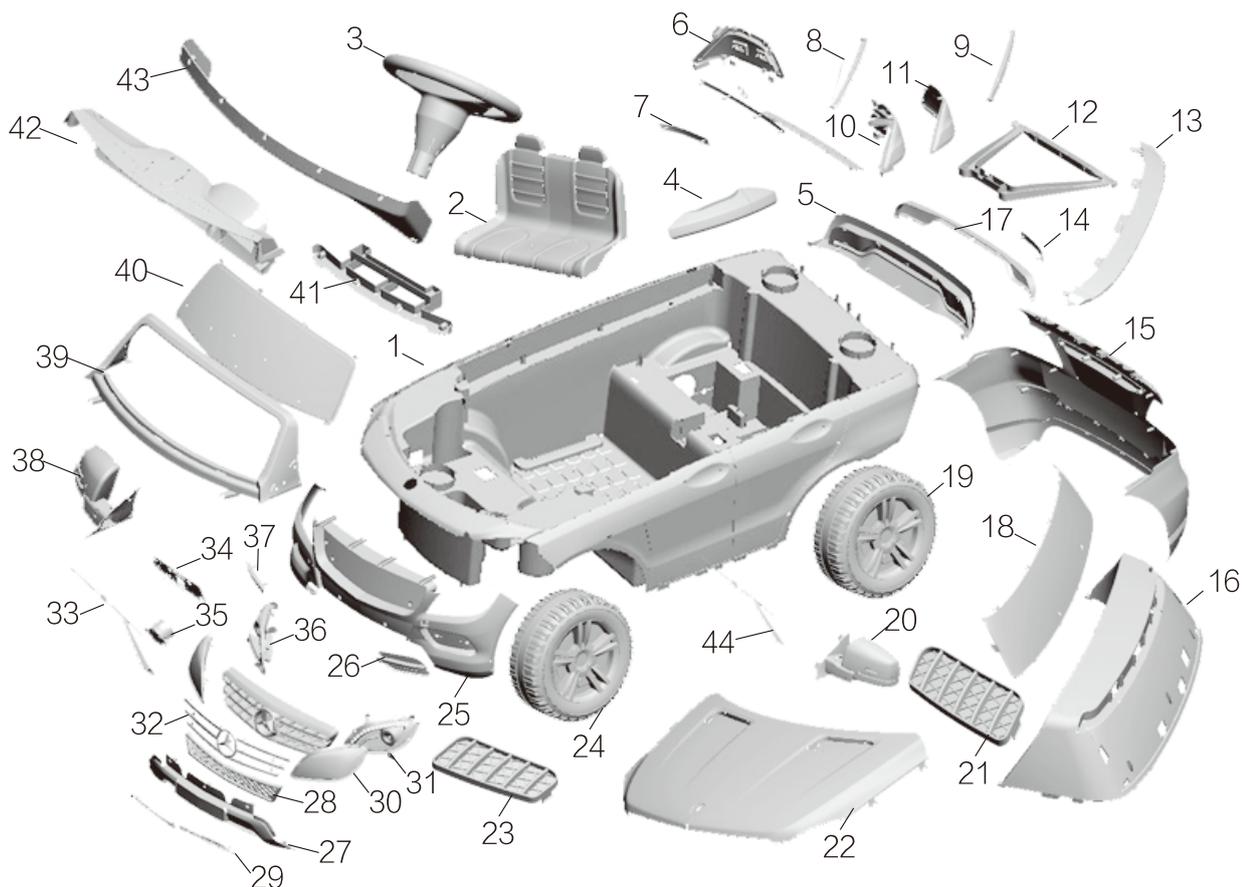

- | | |
|---|---|
| 1. Body | 24. Front Wheel |
| 2. Seat | 25. Front Bumper |
| 3. Steering wheel | 26. Front Radiator B |
| 4. Door knob | 27. Front Bumper A |
| 5. Rear Bumper A | 28. Front Radiator C |
| 6. Rear Light | 29. Front Dadiator D |
| 7. 14. Rear turning light (Left & Right) | 30. Front Light Cover (Left & Right) |
| 8. Rear Wiper | 31.36. Front Light receptacle (Left & Right) |
| 9. Empennage A | 32. Front Bumper Adornment |
| 10. Rear Light receptacle (Left & Right) | 33. Front Wiper A |
| 11. Rear Light cover | 34. F/R Switch board |
| 12. Rear Bumper Bracket | 35. Push-to-start switch |
| 13. Empennage | 37. Front Turning Light (Left & Right) |
| 15. Rear Bumper | 38. Rearview Mirror Left |
| 16. Rear Windshield | 39. Front Windshield |
| 17. Rear Bumper B | 40. Front Windscreen |
| 18. Rear Windscreen | 41. Front Bumper Bracket |
| 19. Rear Wheel | 42. Dash Board A |
| 20. Rearview Mirror Right | 43. Dash Board B |
| 21. 23. Front Radiator A (Right & Left) | 44. Front Wiper B |
| 22. Bonnet | |

Trouble-Shooting:

1. If vehicle fails to move:
 - a) Make sure the battery wires are connected properly.
 - b) Recharge the battery, if necessary.
 - c) Check the fuse and replace if damaged.
2. If vehicle runs slowly:
 - a) Recharge the battery.
3. If the battery can not be recharged:
 - a) Battery or charger may be damaged. Replace if necessary.

If you have any missing or damaged parts or need assembly assistance, please contact our service center directly. Do not return this product to the retailer, they do not stock replacement parts.

Support Website: <http://support.bigtoysusa.com>
Support Phone: 715-955-4237

Made in China

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

